



How to put CCcam

1. By Remote Control


Step 1: Go **Network** press **6666**, **CS Protocol** will Show.

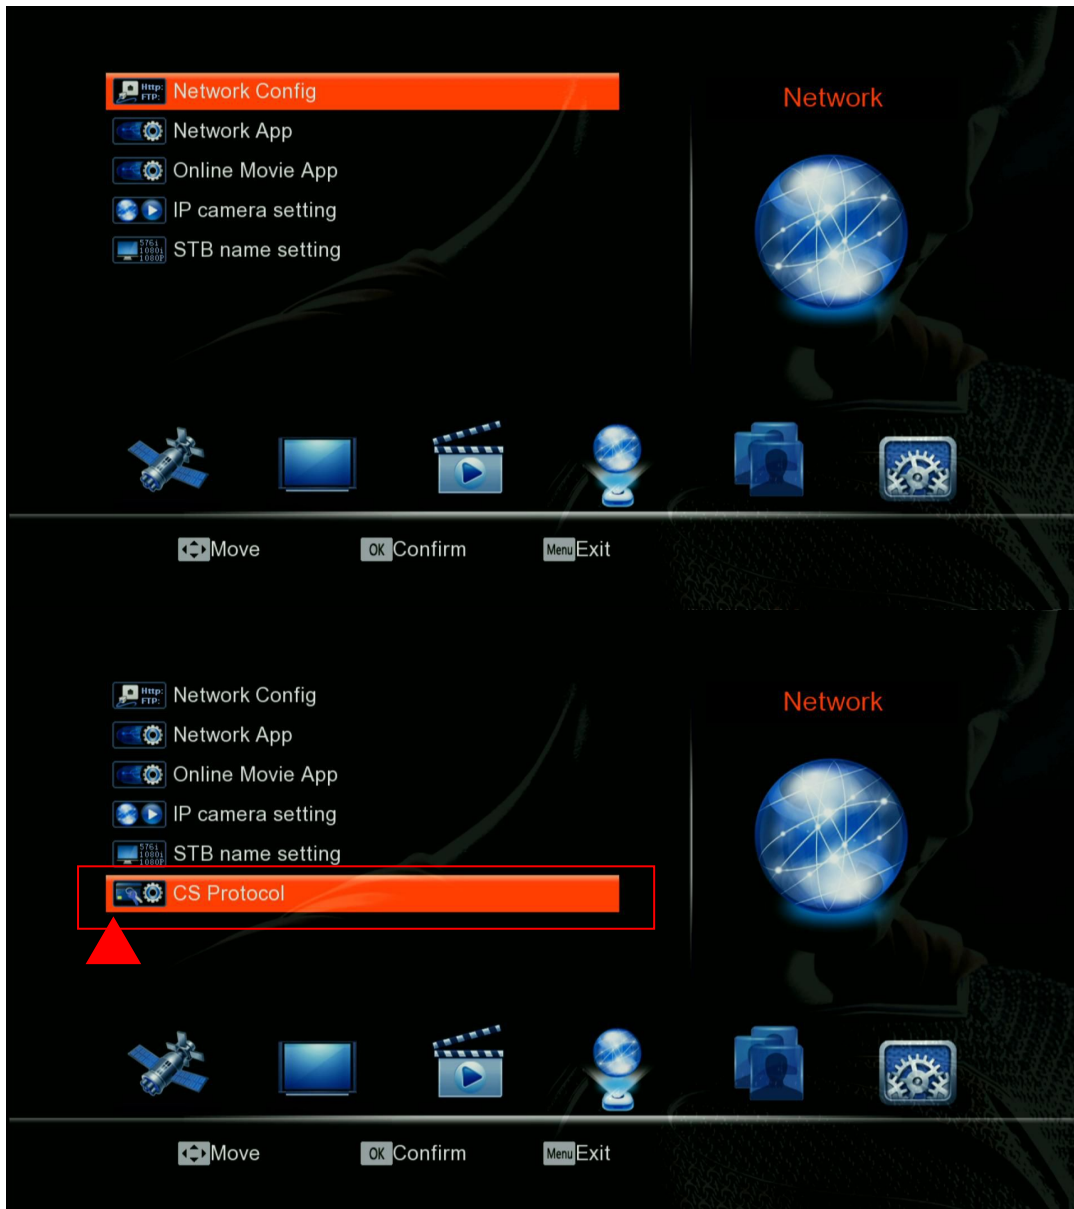

Step 2: Go **CS Protocol**, select **CCCam** by Remote.

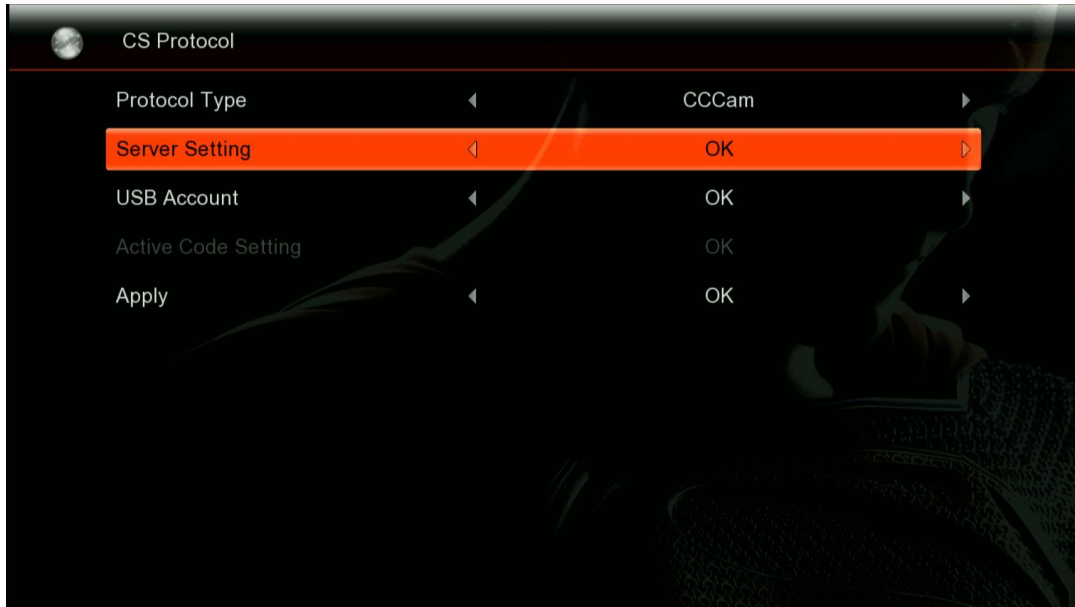

Step 3: Go **Server Setting, put **Server Address / Port / ID / Password** by Remote Control**

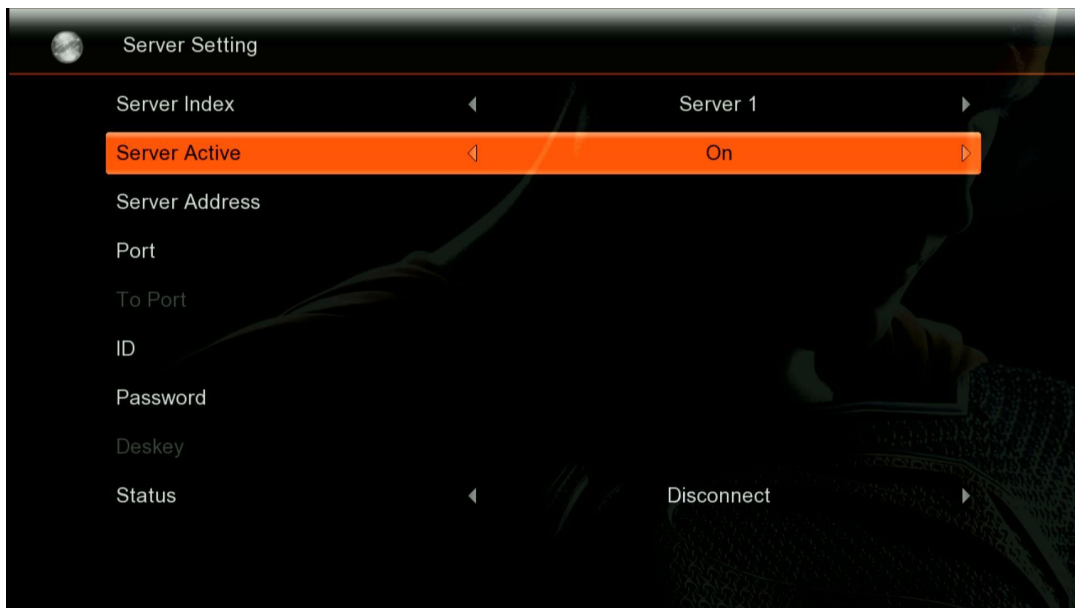


Example:

Server Address: millennium-cccam2.zapto.org

Port: 15783

ID: fmon21000


Password: fmon21000gq67

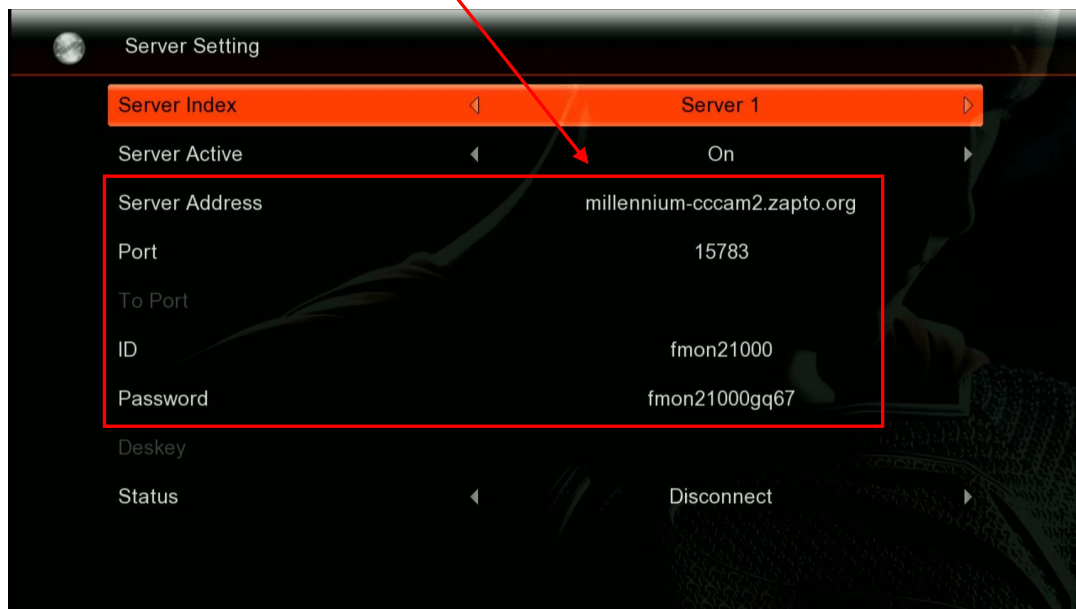

Notice: Don't mix Capital and Small letter

Step 4: Press EXIT and YES to Save.

Step 5: Press Apply to confirm and restart A5s

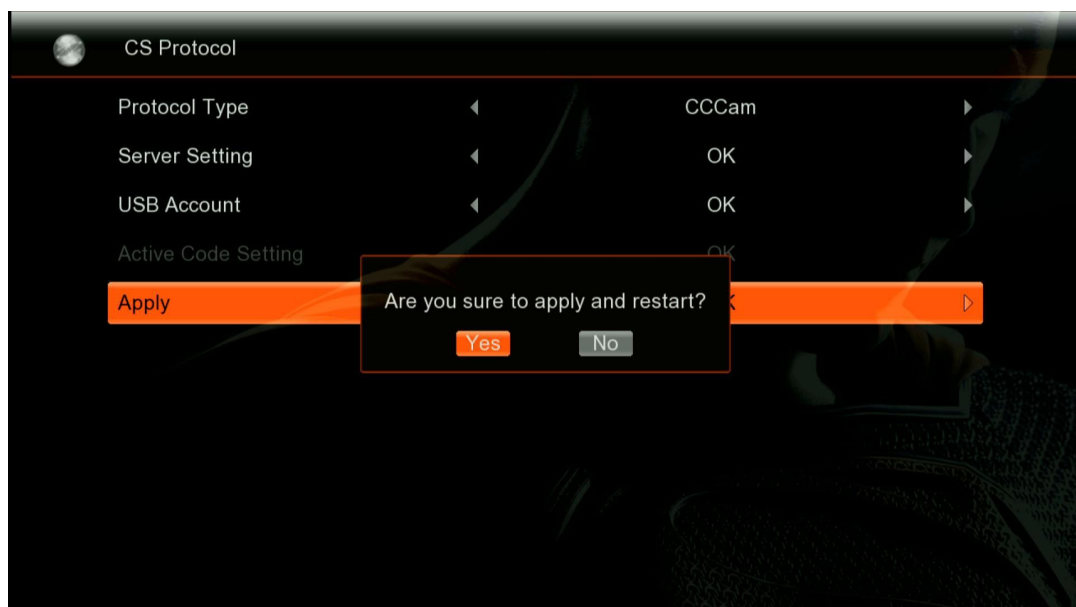

2. By USB

Write CCcam in WORD PAD and name it: **cccam.cfg** put to USB Root directory


MAXIMUM 4 CCcam accounts can put.

C: server address_port_id_password



```
C: millennium-cccam2.zapto.org 15783 fmon21000 fmon21000gq67
C: millennium-cccam.zapto.org 15782 fmon21000 fmon21000gq67
C: www.dm800gx.com 49344 hh961 384587
```

Put USB and go **Cs Protocol**, Select **CCcam** and **USB Account**, Press **YES** to upload the cfg file.

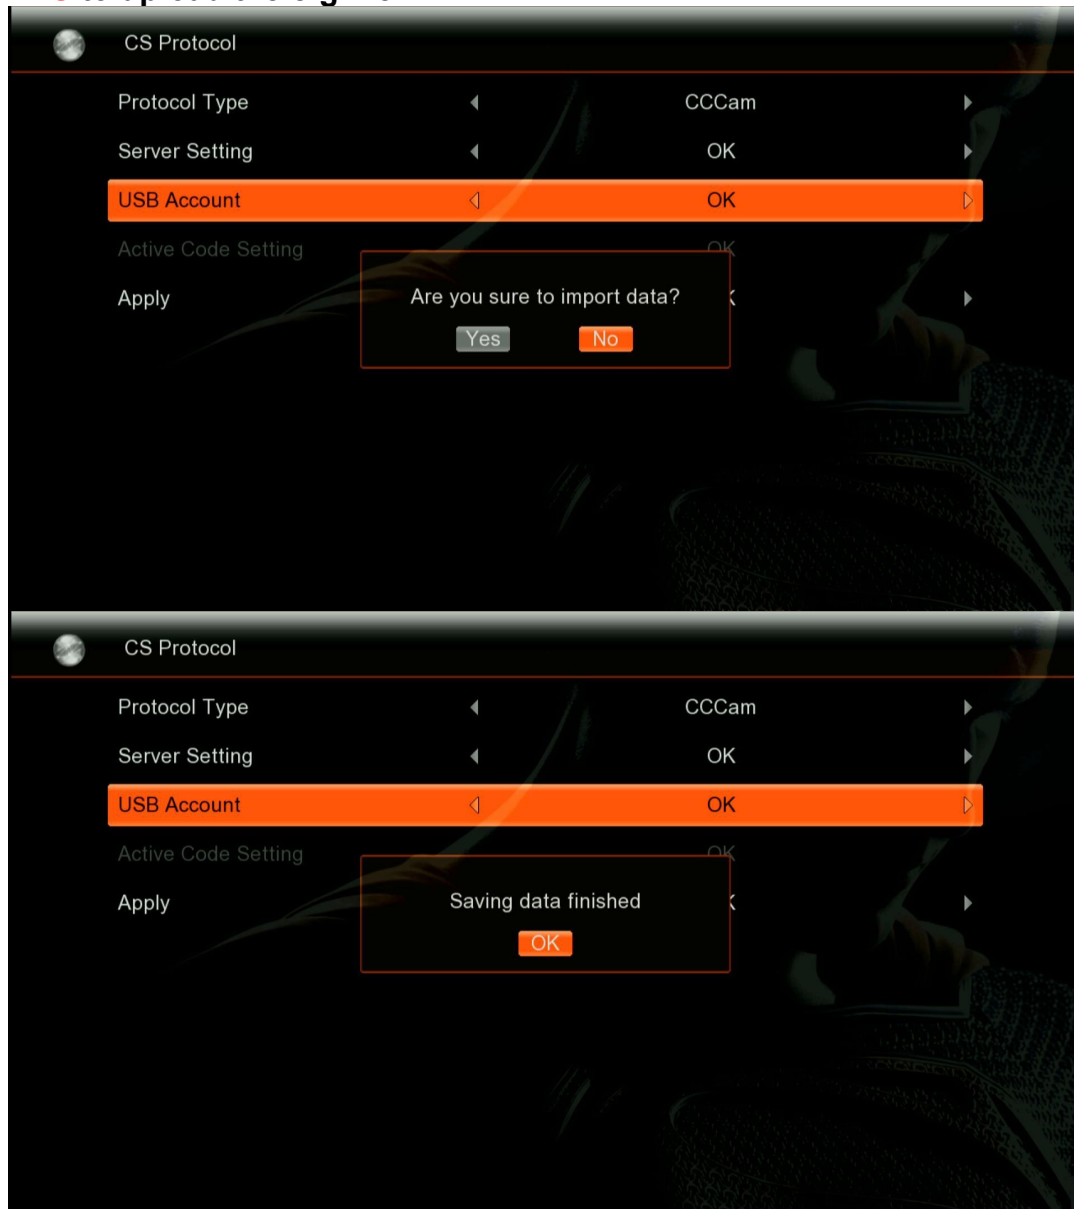

Save and Restart the box.